


End User Guide for Yealink SIP-W60B

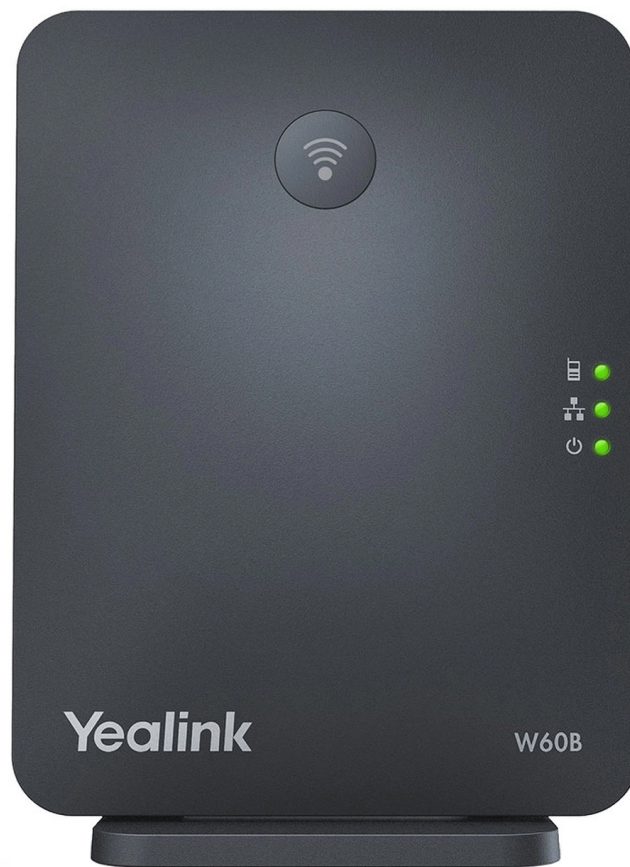

Yealink

END USER GUIDE

Table of Contents

End User Guide for Yealink W60B	
Introduction	2
Accessing the CommPortal	3
Features	4
Preferences	4
Lines 1 – 16	6

End User Guide for Yealink W60B


Introduction

This guide will help you get up and running with your new desk phone. For an explanation of the listed features please reference the AirePBX Feature Guide at <https://airespring.com/resources/resources-others/?d=guides>.

Accessing the CommPortal

To configure phone, log in at <https://commportal.airespring.com/>

Once you login, select Devices and add the Yealink W60B

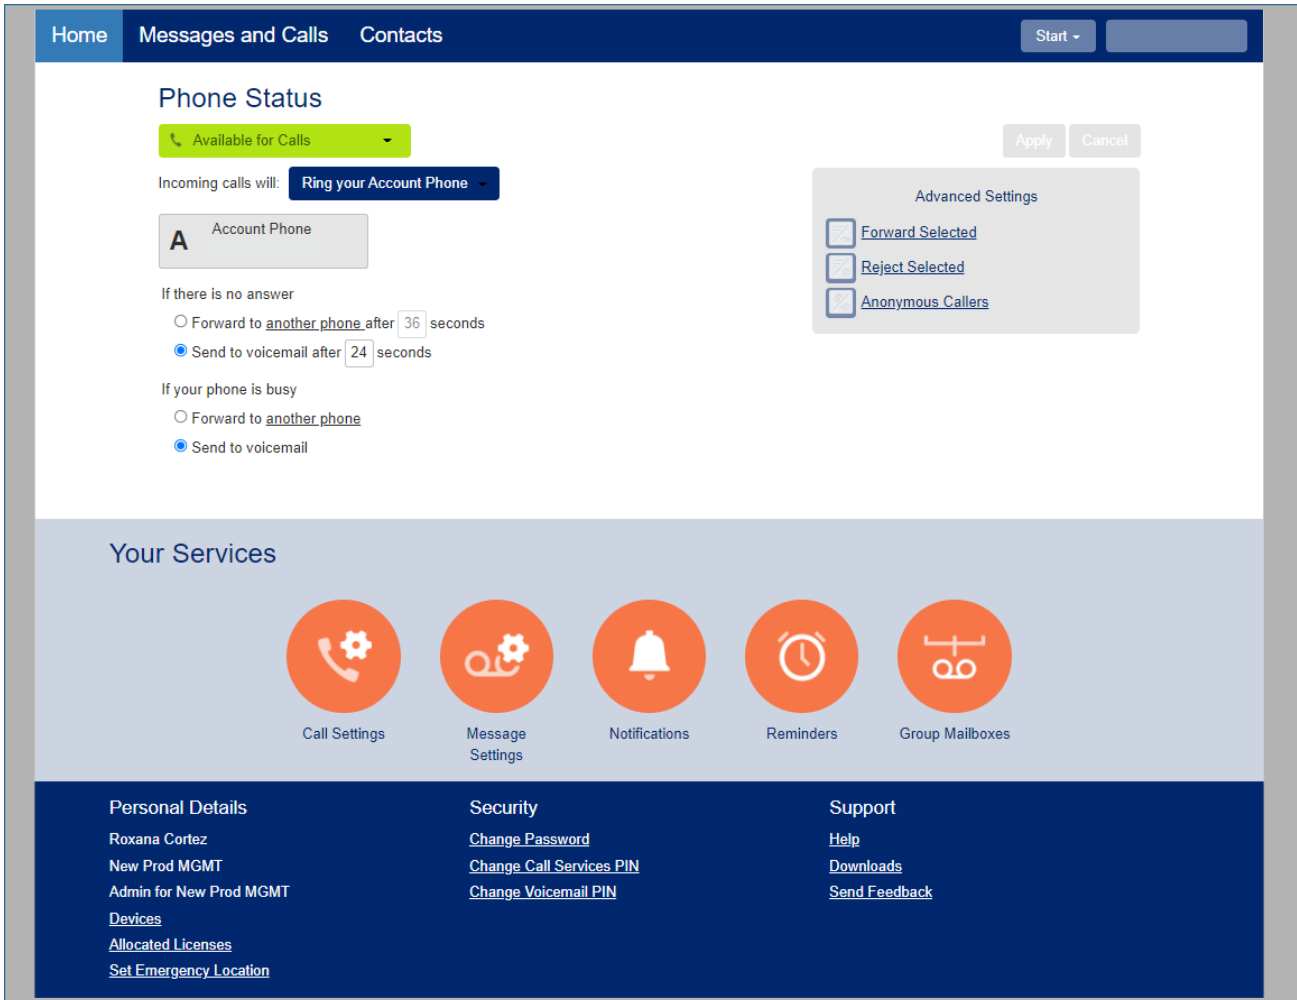

Once you access to the phone page, the following screen will display:





Features

In this section you may enable or disable Call Log.

Preferences

The Line Keys capabilities

In this section you'd be able to enable or disable Call Display, Display Method and Internal Ringer

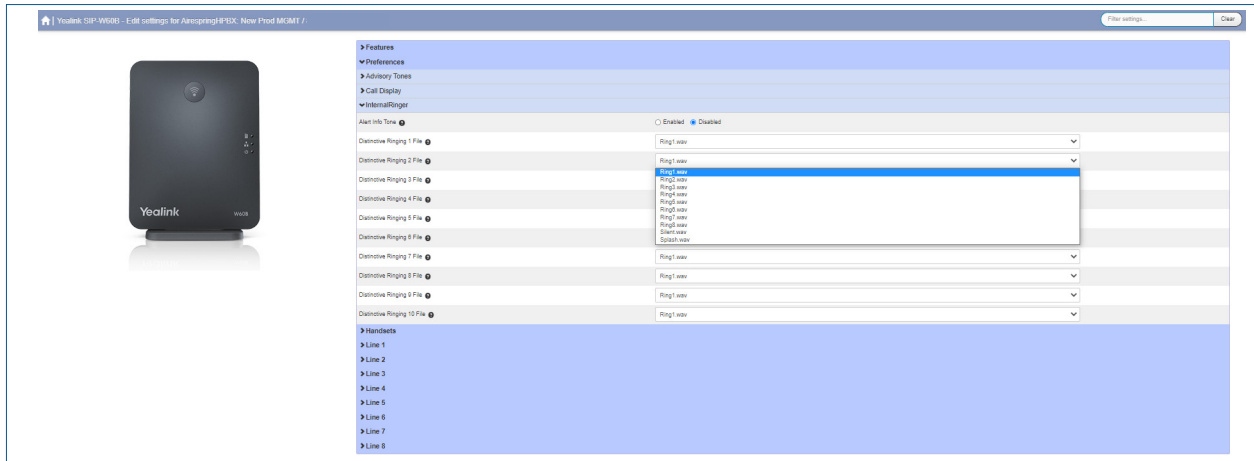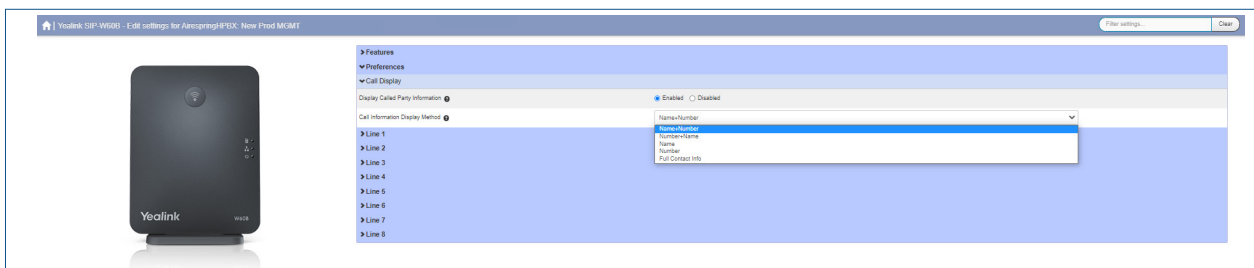

Handsets

In this section you will be able to configure which description type displayed on the handset, by using directory number, extension or custom description.



To register a W53H or W56H handset to the base, charge the device and then register it to the base:

- ▶ On the Base hit the center button, the handset top light will start blinking
- ▶ On the handset hit the Reg button
- ▶ The handset will register to the base and will upload new firmware and install. A temporary error of that the base is not available may be displayed just prior to the firmware upgrade starting.
- ▶ Once complete Time & Date should be displayed with the Handset name at the bottom of the screen
- ▶ If multiple handsets (up to 8) need to be configured to the W60B base each will have to complete its firmware upgrade and come in-service prior to the next one being able attach to the base. Expect the process to take 5-10 minutes per handset.
- ▶ If multiple handsets get registered to the base they will assume sequential handset number from 1 to 8.
- ▶ While one of the handsets is firmware upgrading, all handsets on the W60B are non-operational. Attempting to use one will result in a "Other handset is upgrading!" message.

Lines 1 – 8

In this section you will be able to configure:

User's information (Number, Name, Description) and Voicemail.



Contact us at: [888-389-2899](tel:888-389-2899)



email: customerservice@airespring.com